




**KEYless**  
**Entry Systems**


[www.keylessentrysystems.com.au](http://www.keylessentrysystems.com.au)  
#makeifeasierthinkkeyless

## KES110 Bluetooth Lock Manual



	<b>Item no.</b>	<b>KES110</b>
	<b>Dimension</b>	<b>137*60*12mm</b>
	<b>Material</b>	<b>Zinc Alloy</b>
	<b>Weight</b>	<b>1.3 kg</b>


### Specifications

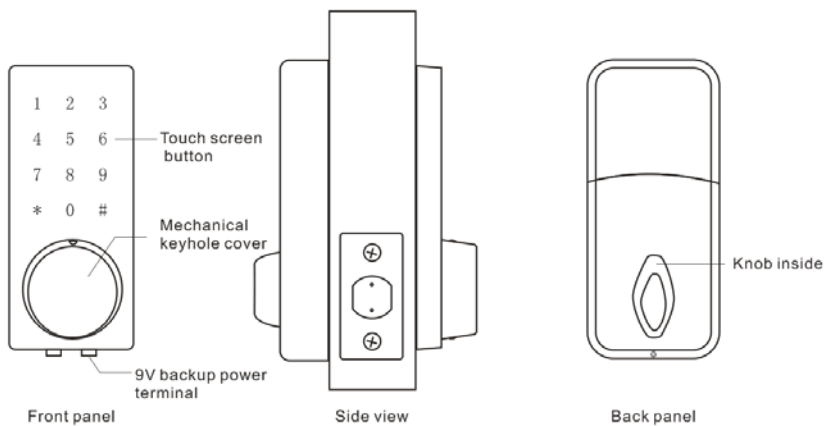


Communication mode	Bluetooth 4.0ble
Unlocking way	Bluetooth, Code, Mechanical key
Support System	Android 4.3 / IOS 7.0 above
Unlock time	≈ 1.5 sec
Power supply	4pcs AA batteries
Static current	≤30uA
Working current	≤200mA

# 1. INTRODUCTION

## 1-2. Dimensions

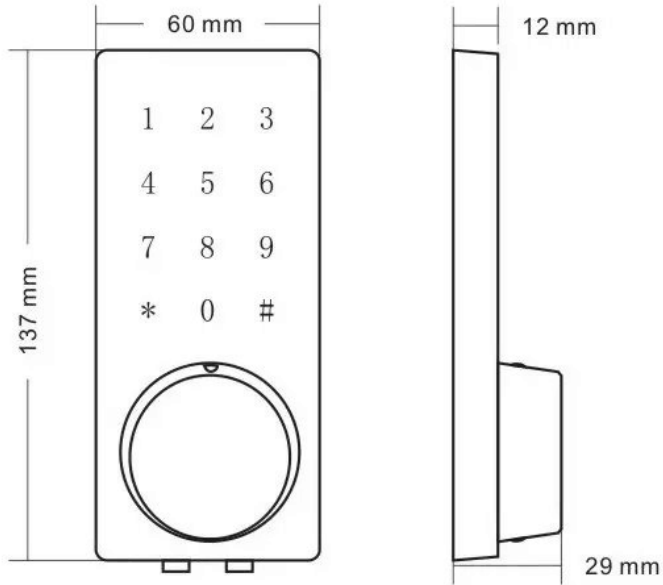

### 1-3. Door drill hole map

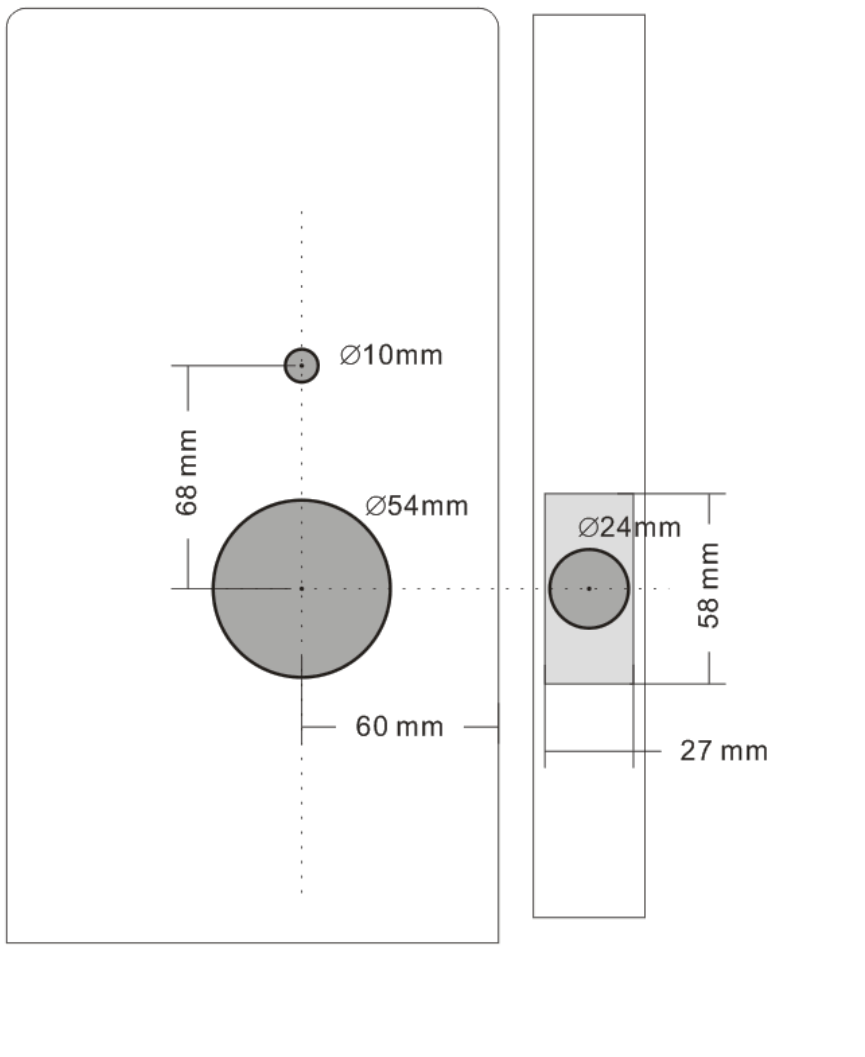


## 2. INSTALLATION GUIDE

### Setting the lock for Right-Hand or Left-Hand Doors

- Door frame thickness  $\geq 110\text{mm}$
- Door thickness: 38-48mm
- To install the lock for a right-hand side door, ensure the toggle switch on the back of the assembly is set to L.
- To install the lock for a left-hand side door, ensure the toggle switch on the back of the assembly is set to R.





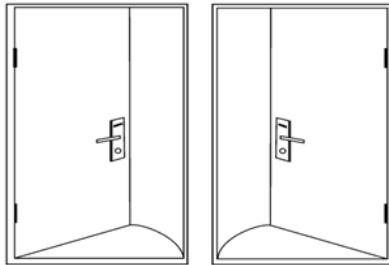













L or R Toggle Switch – Bottom Right Hand Corner




Left-Hand  
Opening into the room

Right-Hand  
Opening into the room


# Step by step installation instructions

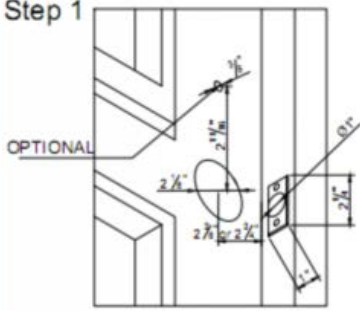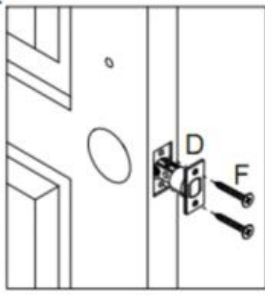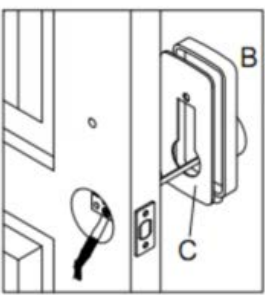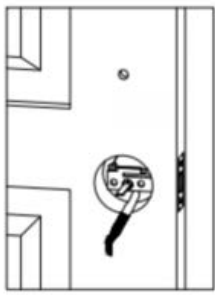ASSEMBLY INSTRUCTIONS						
<p><b>A</b></p>  <p>1PC</p>	<p><b>B</b></p>  <p>1PC</p>	<p><b>C</b></p>  <p>1PC</p>	<p><b>D</b></p>  <p>1PC</p>	<p><b>E</b></p>  <p>1PC</p>		
<p><b>F</b></p>  <p>4PCS</p>	<p><b>G</b></p>  <p>3PCS</p>	<p><b>H</b></p>  <p>1PC</p>	<p><b>I</b></p>  <p>2PCS</p>	<p><b>J</b></p>  <p>1PC</p>	<p><b>K</b></p>  <p>1PC</p>	<p><b>L</b></p>  <p>1PC</p>
<p><b>Step 1</b></p> 			<p><b>Step 2</b></p> 			
<p><b>Step 3</b></p> 			<p><b>Step 4</b></p> 			

Step 5

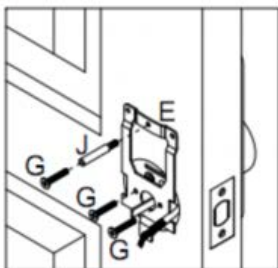


Step 6

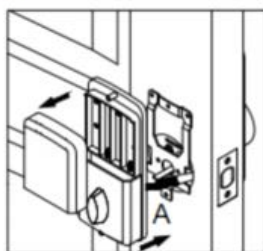


Step 7




Step 8

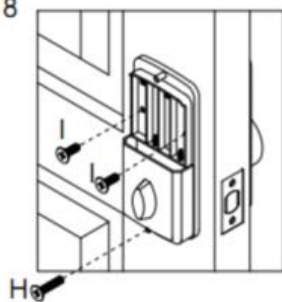


Step 9

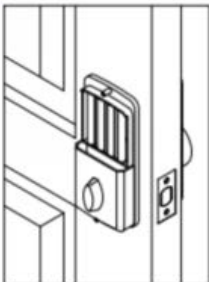

Step 10

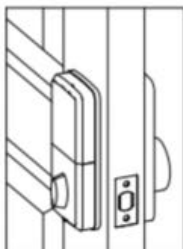

Step 11

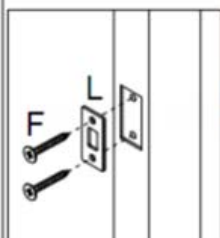



### 3. Summary of Features

**Admin Bluetooth key:** Mobile phone and door lock paired, the Bluetooth lock unlocks with Bluetooth via the app.

**Admin Password:** Mobile phone and door lock paired, the Bluetooth lock unlocks with a permanent Master code.

**Multiple Locks:** A mobile phone can be connected to more than one smart lock at the same time, name your lock when paring it with your phone.

**Bluetooth key remote authorization:** The Admin can instantly send Bluetooth eKeys to other people after they have downloaded APP onto their smartphone and created a TTLock account. Access can be the one time, timed, permanent or cyclic entry.

**Remote password authorisation:** The app can generate one time, timed, permanent or cyclic passcodes even when you are not in range of the door lock.

**Password protection:** The smart lock will automatically lock for 5 minutes when the wrong password is entered 5 times; to protect your password you can enter any number of digits before entering the correct password, ensure the last digits are the correct password and the lock will recognise your password.




**Automatic unlocking:** The lock can be set to automatically lock between 5 to 120 seconds after unlocking.

**General lock:** Press and hold “#” about 5 seconds to lock the door when in manual mode.

**Low Battery Consumption:** 4pcs AA batteries can provide 5000 openings (approx. 6 months)

**Low Battery Indicator:** When the battery power is low, the Bluetooth lock will emit low battery warning sound. The battery level will also be updated on the app during Bluetooth unlocking. If the battery power runs out, use 9V backup battery or mechanical key.

**Real time monitoring:** When users use the app or password to unlock the door, the Admin can see the unlocking time records on APP.

**Real-time reminder:** Mobile phone and door lock connected, click “” on the upper right corner of the interface, you can query the record of received Bluetooth key and more user information.

## 4. PROGRAMMING

**\*\*\*Please note the TTlock App is constantly being developed so these instructions may differ from what you see within the App\*\*\***


### 4-1. Pairing lock to the phone

1) For the Android App, please scan the QR code below or search “TTlock” from the Google Play store.

2) For the Apple App, please scan the QR code below or search for “TTlock” from App Store.




2. Register a new account (phone number or email) or login with an existing account.  
 3. If you want to set up the lock prior to installation on the door, press and hold the white button on the back of front panel before the next steps, otherwise the locks anti-tampering alarm will sound.

4. Turn on Bluetooth and login into the APP, Select the user profile  in the top left hand corner and click "+ Add Lock".


5. Remove 1pc of battery--touch keyboard a few seconds--put back the battery--press"#" immediately--you will




see" "----press"+"----set name for the lock---press "ok".

6. After your mobile phone and door lock are paired, click "" on the upper left corner of the interface then there have more functional operations can be performed.

#### 4-2. Unlock(The Admin unlock)

1. After mobile phone and door lock are paired, click the connected door lock device---"" to unlock. (Within 5 metres from the door lock)


2. The Admin password unlock, after mobile phone and door lock are paired, open the APP---click connected door lock device--click "" on the bottom of the interface---see Admin passcode--input passcode ---"#" to unlock.

3. Mechanical key unlock, use a screwdriver to open the round keyhole cover on the front panel, then use mechanical key to unlock the door.

4. When you are in the room, use thumb--turn on back panel to unlock.


#### 4-3. Lock

1. Press and hold "#" about 5 seconds to lock.

2. Set auto lock, click the connected door lock device—click "" on the bottom of the interface---auto lock--choose set time 5s – 120s---OK. (This operation must be within range of the door lock and need to be connected via Bluetooth)

3. Mechanical key lock door, use a screwdriver to open the round keyhole cover on the front panel, then use the mechanical key to lock the door.
4. When you are in the room, use thumb-turn on back panel to lock door.

#### 4-4. Modify the Admin password

Click the connected door lock device---click “” on the bottom of the interface---Admin passcode--input the APP account login password---input the new Admin password (7-8 digits) --- save. (This operation must be near the door lock and need to be connected to Bluetooth)


#### 4-5. Modify the Admin


A door lock can only have one Admin at the same time, you need to delete the original Admin first if you want to modify the Admin. find the door lock device that you want to modify the Admin---slide to the left---delete---click it---input the APP account login password--- ok. (This operation must be near the door lock and need to be connected to Bluetooth)

#### 4-6. Bluetooth key remote authorization(Admin’s phone can remotely send electronic keys to other users to unlock)

Click the connected door lock device---“Send eKey” on the bottom of the interface---choose“Permanent” or“Timed” ---input the receiver’s APP account (the receiver must download the APP and register an account) --- “Send”。

#### 4-7. The Admin’s phone has the right to freeze, delete, authorize, and rename for the electronic key that has been sent


Click the connected door lock device---“eKeys” on the bottom of the interface--- on the upper right corner of the interface---choose “Clear eKeys” or “Reset eKeys” or “Send eKey” according to your needs. If you only need to manage some of the keys, Click the electronic key that you want to manage, according to your needs to choose “Freeze” or “Delete” or“Authorize”

or “Rename”; also you can click  on the upper right corner of the interface to change the validity of the electronic key that has been sent.

#### **4-8. Password remote authorization (Admin’s phone can remotely send password to other users to unlock)**

Click the connected door lock device---”send” on the bottom of the interface---choose “Permanent” or “Timed” or “Cyclic” or “One-time” or “Customised” according to your needs---edit the active time---”Generate”---”Send by Wechat” or “Send by Msg.’. (ps: This operation need to be connected to network)

#### **4-9. The Admin’s phone has the right to rename, delete the password that has been sent**

Click the connected door lock device---”Passcodes” on the bottom of the interface--- on the upper right corner of the interface---choose “Reset passcode” or “Send passcode” according to your needs. If you only need to manage some of the password, click the password that you want to manage, choose”Rename”or “Delete” according to your needs. (ps: This operation must be near the door lock and need to be connected to Bluetooth)

### **5. Changing batteries**

To open the battery compartment, slide the cover upwards and put 4pcs AA batteries. (It is recommended to use a reputable battery brand. Also please use 4 batteries of the same type &brand).